

NEMESIS DELAY

Quick Start Reference Card

POWER

Power your Nemesis with the included power supply. If you're using a pedalboard power supply, be sure to use a regulated 9 Volt DC output that can source at least 200mA.

CONTROLS

TIME - Sets delay time. Range varies per engine. Max 2.6 second delay.

MIX - Sets the wet/dry mix. The mid-point of the knob is a 50/50 mix.

FEEDBACK - Controls number of repeats. Use caution with high feedback!

MOD/RATE - Controls depth and speed of time/pitch modulation.

TRAILS MODE - Press+hold CONTROL INPUT, then press On/OFF FOOTSWITCH to toggle On/Off.

STEREO OUT - Plug in to OUTPUT 2. Nemesis will auto-detect input and output connections.

MASTER VOLUME - Press+hold CONTROL INPUT, then turn Mix KNOB to adjust.

TAP TEMPO - Tap footswitch at least twice to set the delay time.

HOLD/FREEZE - Press+hold TAP FOOTSWITCH for infinite repeats.

CONTROL INPUT - Press to enable external expression control.

INTENSITY - Function varies per engine:

Effect Engine	MIN	MID	MAX
DIGITAL	High Cut	Clean	Low Cut
DIFFUSE	Clean	Light Diffusion	High Diffusion
ANALOG	Dark	Warm	Bright
TAPE	Warm	Saturated	Clean
NOISE TAPE	Dark	Warm	Bright
DEGRADE	Clean	Thin, Distorted	Aliased
SHIFTER	-Octave +m3rd	+M3rd +4th +5th	+Octave
HELIX	Warm	Clean	Bright
REVERSE	Single Tap		Multi-Tap
SWEEPER	Low Q	Medium Q	High Q
RHYTHMIC	1 2 3 4	5 6 7	8
SLAPBACK	Warm	Clean	Bright

PRESETS

Press SELECT BUTTON to load, press+hold to save. LED blinks slowly when save is complete.

NEURO APP

Available for iOS and Android. Allows for advanced editing, saving, and sharing presets.

USERS GUIDE

Get the full User's Guide, software tools, updates, and additional information at

www.sourceaudio.net/products/nemesis